

QUICK PROGRAM GUIDE

COLORS/MODES for the SAVI Pool Light, SAVI Spa Light & M4 Stand Alone Controller

1	Treasure Island	smooth color transition
2	Moonlight White	fixed color - white
3	SAVI Blue	fixed color - dark blue
4	Sargasson Sea	fixed color - green
5	Blue Lagoon	fixed color - light blue
6	Passion Pink	fixed color - pink
7	Caribbean Hues	blue - green fades
8	Copacabana	medium fast color changes
9	Dance Party	fast color changes

Visit www.nexxuslighting.com for additional information



31.0014-b

savi[™]

NEXXUS[™]
LIGHTING

QUICK PROGRAM GUIDE

OPERATING INSTRUCTIONS

To change the color mode of the light(s), turn the light(s) ON.

See the following chart to ADVANCE your pool or spa area lighting system to the desired color mode using your light switch.

SAVI Pool Light, SAVI Spa Light & M4-SA Combination	
Time held at OFF position	Result
1-2 seconds	ADVANCE all lights one color mode.
3-5 seconds	ADVANCE Spa Light and/or M4-SA, FREEZE Pool Light
6-9 seconds	RESET light(s) to first color mode (Treasure Island).
10 seconds or more	"MEMORY FEATURE" (remembers last color used).

SAVI Spa Light & M4-SA Only	
Time held at OFF position	Result
1-5 seconds	ADVANCE light(s) one color mode.
6-9 seconds	RESET light(s) to first color mode (Treasure Island).
10 seconds or more	"MEMORY FEATURE" (remembers last color used).

SAVI Pool Light Only	
Time held at OFF position	Result
1-2 seconds	ADVANCE light one color mode.
3-5 seconds	NO CHANGE (This is a design feature for pools with SAVI Spa Lights and M4-SA controlled lights).
6-9 seconds	RESET light(s) to first color mode (Treasure Island).
10 seconds or more	"MEMORY FEATURE" (remembers last color used).

31.0014-b