

## Safety instructions for LR-LED Series

**WARNING:** These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with the owners manual, current electrical codes and/or the current National Electric Code (NEC). Use this fixture only with the plug-in power cord that is supplied with the fixture. Any other power cord or feed may damage the fixture.

### **IMPORTANT SAFETY INSTRUCTIONS - Read all instructions and save for reference.**

1. Do not cover this product. Covering it may cause the LED Flexbrite to overheat and melt or ignite.
2. Do not plug in or operate the LED Flexbrite if it is tightly coiled.
3. Do not puncture, cut, shorten or splice the LED Flexbrite.
4. Do not route the cord or cable through walls, doors, windows or any like part of a building structure.
5. Do not use if there is any damage to the light or cord insulation. Inspect periodically.
6. Do not submerge LED Flexbrite in liquids, or use the product in the vicinity of standing water or liquids.
7. Secure this Flexbrite cable using only the hangers or clips provided. Do not secure this product or its power cord with staples, nails or like means that can cut the outer jacket or damage the cord insulation. If track is needed, use only DL-TRACK-4.
8. Do not subject LED Flexbrite to continuous flexing.
9. All units must be unplugged during installation and before adding additional Flexbrite segments. Do not exceed the maximum length of 240 feet.
10. Use only flexbrite kits with the model prefix: LR-LED-XX-X to extend the overall run.
11. Ensure that all connections and end cap on the last segment are tightly secured to preclude the entrance of water.
12. This product has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
13. Product is designed for use only with outlets that have AC power operating at 120V, 60Hz.

### **Warning—When using outdoor rated portable lighting products, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:**


1. Ground Fault Circuit Interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for outdoor use of LED Flexbrite. Receptacles are available having built-in GFCI protection for this measure of safety.
2. Use only outdoor extension cords, such as type SW, SOW, STW, STOW, SJW, SJOW, SJTW, OR SJTO. This designation is marked on the wire of the extension cord. Maximum combined total length: 240 feet.

### **This plug contains an electrical fuse as a safety feature.**

#### **To replace the fuse (see Figure 1):**

1. Disconnect power before replacing the fuse.
2. Grasp plug and remove from the receptacle or other outlet device.
3. Do not unplug by pulling on the cord.
4. Unscrew the fuse access cover on top of the attachment plug.
5. Remove old fuse carefully.
6. Never attempt to replace the fuse with a higher wattage fuse. Use only 5 Amp 120 Volt fuse. Failure to do so may be a fire hazard.
7. Set new fuse in holder.
8. Reinstall the fuse access cover.

Figure 1

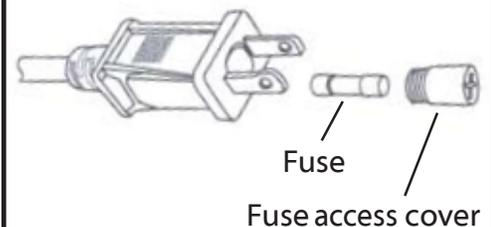

# LED Flexbrite Kits

## Safety instructions for LR-LED Series

**WARNING:** These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with the owners manual, current electrical codes and/or the current National Electric Code (NEC). Use this fixture only with the plug-in power cord that is supplied with the fixture. Any other power cord or feed may damage the fixture.

### How to Extend Light Rope (see Figure 2)

1. Turn the plastic end cap counter clockwise to remove from the first Flexbrite kit.
2. Remove power cord from the next Flexbrite kit to be added to the same run.
3. Connect both ends of the ropes (the male and female halves plug into each other). Make sure all connectors are firmly tightened and secured (see Figure 2).
4. Check that the plastic cap on the last Flexbrite kit is tightly secured. If not, tighten it by turning it firmly clockwise.


Figure 2



### How to Install Light Rope

1. Attach mounting clips with nails or screws onto wooden surfaces. Be sure that it is mechanically sound.
2. Mounting clips should be evenly spaced and be a maximum of 12 inches apart (see Figure 3).
3. Make sure that the distance between two lines of lighting chains are at least 1/2" apart. NOTE: For straight line applications, use DL-TRACK-4 mounting track (sold separately).
4. Gently press rope light into track or clips so that it snaps into place.

Figure 3

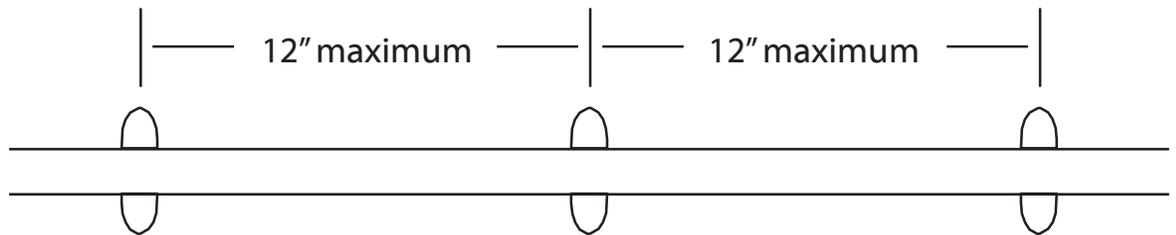

### PROP 65 WARNING

Handling the coated electrical wires of this product exposes you to Lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. WASH HANDS AFTER USE.