 
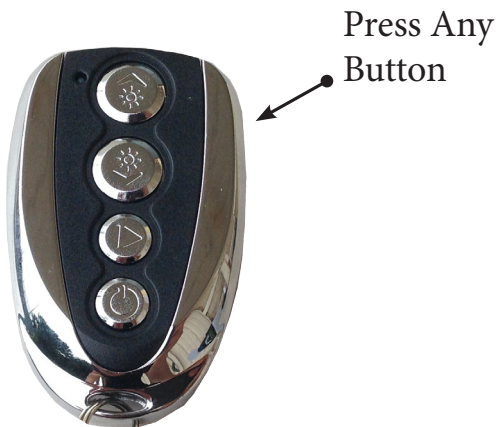 
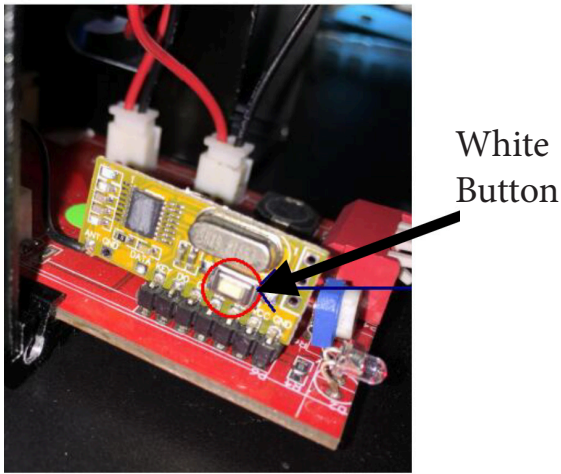 


## Light Engine remote pairing

---

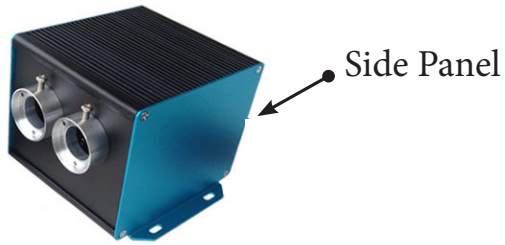

1. Remove the side panel of the unit.
2. Press the white button for 2 seconds.
3. When the signal LED goes off, it is in matching mode.
4. Release the White button and press any button on the remote controller
5. The LED should flash two times to confirm succesful matching