

## **Triklits Mini Controller Effects**

### **Power On/Off**

If the PATTERN button is held down a few seconds the power is turned off and the selected pattern is saved in memory. Hitting either button turns the power back on and resumes the last saved pattern.

### **Effects selection**

Pressing the PATTERN button selects the next pattern from the list below. The VARIATION button selects variations of the pattern, such as speed, color or brightness. You can hold this button down to step through the variations.

PATTERN BUTTON	VARIATION BUTTON	DESCRIPTION
=====		
=====		
Test sequence	-	turns lights on in sequence: red, green, blue, white
Xmas lights	sets of 1 or 3	random color changing lights in groups of 1 or 3
Twinkle	color (8)	fast blinking lights
Expander	sparkles/none	lights turn on from center to edges
Explode	-	lights explode from center
One color random	speed (4)	all lights change from one random color to another
Two color random	speed (4)	alternate lights change from a random color to another
Very fast sweep	speed (8)	fast moving rainbow
Fast sweep	speed (4)	moving rainbow
Sweep	speed (4)	slow moving rainbow
Candles	-	candle flickering effect
Strobe	speed (16)	white strobe light
Flash color wheel	-	all lights flash and change color slowly
Flashrgb	-	all lights flash red, green, and blue very fast
Rotryy	ryy/rry	chaser light sequence with red and yellow
Rotany	color (256)	chaser light with adjustable color

Rotrwb	still/rotate	chaser or still light of red, white, blue
Rotrwg	still/rotate	chaser or still light of red, white, green
Fixvw	color (256)	alternating lights of white and adjustable color
Fixrg	still/sparkle	red/green lights with optional sparkling
Random colors	speed (4)	random color changing lights
Waves	color/sparkles (8)	smooth chaser waves, adjust color and sparking
Color comets	speed (8)	color wheel comets
White comets	speed (8)	white comets
Rbsnake	speed (8)	red to blue snakes
Color wheel	-	all lights cycle through rainbow
Fix white	dim (16)	all lights cool white, dimmable
Fix warm white	dim (16)	all lights warm white, dimmable
Fix color	color (256)	all lights same color, adjustable color
Fix dim	dim (16)	allows dimming of color from previous pattern
Receive	-	sets lights to receive mode for chaining to other strings

### **Receive mode**

Receive mode is used when synchronizing multiple light strings, or when controlling the strings via the external interface. Step through the PATTERNS until you see the first three lights on the string lit up as RED, GREEN, and BLUE. This is the receive mode. To set the lights so they come up in this mode if they lose power, HOLD down the PATTERN button until all the lights go off. Now this mode is saved in memory. Now press the PATTERN button just ONCE more, this turns the light string back on in receive mode, but the lights will all be off until they receive a command from the interface.