


Advanced Multifunction Mini Controller Remote

The Minleon Advanced Multifunction Mini Controller Remote has several basic and advanced features that allow you to take full control of your lights for any occasion by just using the Multifunction Mini Controller Remote.

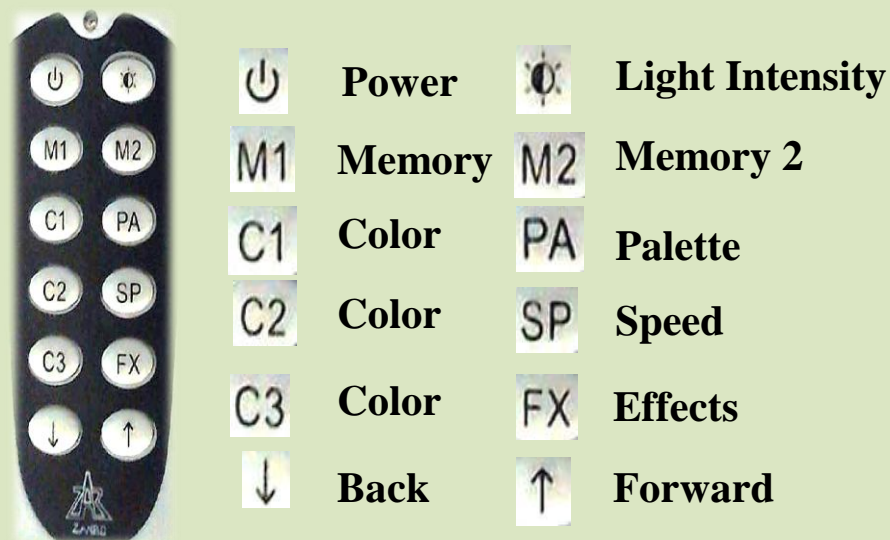

Remote Controller Functions

Turning lights on and off

Press the **Power** button

Setting the number of lights connected to the Controller

Turn the lights on then hold the **Power** button for more than 1 second. All active lights will turn on Red with the last active light flashing blue.

Press **Power** to decrease the number of lights connected.

Press **Down Arrow** to increase the number of lights connected.

Press **Up Arrow** to return to normal operation

Changing the level of light intensity

Press **Light Intensity** button then press **Up Arrow** to increase intensity or press **Down Arrow** to decrease intensity

Press **Light Intensity** button for 1 second to return to full intensity

Changing the Light Effect Function

Press the **FX** button then press **Up Arrow** or **Down Arrow** to select the appropriate effect

Saving a Favourite Effect to Memory for Quick Recall

You can save 2 quick recall effects by selecting the appropriate effect that you like and then hold the **M1** or the **M2** button for more than 1 second to save that effect to the appropriate memory button. A small flash of the lights indicates the effect has been saved.

Retrieving a Favourite Effect from Memory

Press either **M1** or **M2** button to retrieve the appropriate previously saved effect

Changing the Speed of an Effect

Press the **SP** button then press **Up Arrow** or **Down Arrow** to either speed up or slow down the effect

Hold the **SP** button for more than 1 second to change the direction of certain effects

Changing the Color Palette

Press the **PA** button to cycle through the three color modes

Saturated → Pastels → White

Effects Color Edit Mode

Certain effects allow you to edit 3 different colors to be used for your favourite sporting team, celebration, fund raiser or any occasion that you see fit.

Whilst the effect is running press **C1** button to edit the first of 3 colors. The first 3 lights connected will turn on with their currently set colors and the 4th light will be off. The first light will flash to indicate that color 1 is selected

Press either **Up Arrow** or **Down Arrow** or **PA** to change color, The remaining lights from the 5th light onwards will change color to indicate the color chosen.

Press **C2** button to edit the second color, the 2nd light will now flash

Press **C3** button to edit the third color, the 3rd light will now flash

Press the **FX** button to return to the effect with the new chosen colors

Hold down the **C1**, **C2** or **C3** button for longer than 1 second to clear the custom color. If all custom colors are deleted, effects that use them will pick random colors instead

Color Paint Mode

You have the ability to set the color of each light for specific lighting needs and recall this for use at any time

Hold down the **PA** button for 1 second to enter the individual light edit mode. The lights will change to the pre-set colours with the currently selected light slowly flashing.

Press **C1** button and then press either **Up Arrow** or **Down Arrow** buttons to change the colour of the selected light, this is indicated by the selected light flashing on and off

Press **C2** button and then press either **Up Arrow** or **Down Arrow** buttons to select the appropriate light to edit. This is indicated by the selected light flashing red

You can also briefly press the **PA** button to change the colour palette of the selected light

Hold down the **PA** button for 1 second to set the selected colors

Save as a favourite to memory by pressing and holding either **M1** or **M2** button for 1 second.

No.	Effect Name	Effect Description	Variation
1	Test Pattern	test mode	
2	Demo Mode	changes effects randomly	
3	Paint Mode Lights^	Uses the lights created in Paint mode	
4	Color Wheel	all lights cycle through color wheel	4 speeds
5	Rainbow	rainbow of color	8 speeds
6	Wide Rainbow	wide rainbow of color	8 speeds
7	Christmas Lights	colors fade in and out	4 speeds
8	Color Change	all lights change to new colors	4 speeds
9	Two Color Change	alternate lights change to new colors	4 speeds
10	Chaser	colored chaser lights	4 speeds
11	Ping Pong	back and forth colors	4 speeds
12	Expander	colors expanding from center	8 themes
13	Exploder	lights exploding from center	8 speeds
14	RGB Flash	Red Green Blue flasher	8 speeds
15	Effects Manual Mode*	Uses the effects edit mode colors	
16	Color Burst*	lights bursting from side	8 speeds
17	Chaser*	colored chaser lights	8 speeds
18	Ping Pong*	back and forth colors from centre	4 speeds
19	Color Glow*	glowing colors	4 speeds
20	Color Waves*	colored wave	8 styles
21	Color Blend*	blends colors across the string	
22	Twinkle*	twinkling, flashing lights	4 speeds
23	Shimmer*	Shimmering lights	

*- Effects Edit Mode colors used

^- Color Paint Mode colors used

Important Notice

It is the sole responsibility of the reader to ensure that all safety precautions are taken, Minleon and/or any involved parties relinquishes any responsibility and liabilities for any content within this quick guide that may cause the reader any injury or loss of property due to incorrect use. By reading this guide you take sole responsibility for all actions taken. Ensure all local and state electrical laws are taken into consideration when using this product. Minleon do not take responsibility for any use outside of state and local laws and regulations. Minleon reserve the right to make product changes from time to time which may differ from this guide



© Copyright 2013 Minleon

www.minleonusa.com

www.minleonusnz.com